

No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Issue		MODIFICATIONS			
Item		Part Number	Illus. No.		THD	Unit of	Type of Vehicle	New Part Number	Change Point	Amdt. No.	REMARKS
	CHASSIS FRAME										
1 2 3	Chassis frame complete	AHH5002 AHH5293 HPZ0406	Q1 Q2 Q3 Q4 Q5	11 19	1 1						
4 5 6	Washer for plate to post screw (plain) Washer for plate to post screw (spring)	PWZ104 LWZ204		9	9						
7 8	Cover-plate—R/H—goal-post Cover-plate—L/H—goal-post Folt—seal for cover-plate—lower	АНН5343 АНН5344 АНН5345	O6	11 12	1 1 2						
$\begin{bmatrix} 9\\10\\11\end{bmatrix}$	Felt—seal for cover-plate—upper Screw for cover-plate to post (vertical) Screw for cover to post stay	AHH5346 CTZ803 PTZ1003	Õ7 Õ8 Õ9 Õ10	6	2 6						
12 13 14	Screw for cover-plate to goal-post stay (vertical) Washer for screw (plain)	PTZ1005 PWZ203	Q11 Q12	2	2 2						
15 16	Front extension assembly Screw for extension to frame bracket Nut for extension to frame bracket screw	AHH5129 HZS0606 FNZ106	Q13 Q14 Q15		8 8			AHH5924	Com. (C) 66574		
17 18 19	Washer for extension/frame screw (spring) Bracket assembly—R/H—bumper support Bracket assembly—L/H—bumper support	LWZ206 AHH5139 AHH5140	Q16 Q17	8 1							
20 21 22	Nut for bracket to front extension	HNS0506 FNZ105	Q18 Q19	6	6						
23	Washer for bracket to front extension screw (spring)	PMZ0306	Q20 Q21 Q22	2							
25 26 27	Nut for clip screw Washer for clip screw (spring) Nut for rebound strap spindle	FNZ103 LWZ203 FNZ106	Q23 Q24 Q25	2 2	22						
28 29 30	Washer for rebound strap spindle (plain) Washer for rebound strap spindle (spring)	PWZ206 LWZ206	$egin{pmatrix} \widetilde{\mathrm{Q}}26 \ \widetilde{\mathrm{Q}}27 \end{bmatrix}$	2	2						
31 32	Strap for tail lamp cable to rear cross-member Clip for battery cable and harness Screw for clip to clip bracket on frame	AHH5248 PMZ0308	Q28 Q29 Q30	6 6	6						
33 34	Nut for clip to clip bracket on frame screw Washer for clip to clip bracket screw (spring)	FNZ103 LWZ 2 03	Õ31 Õ32	6	6				!		
ļ											
j											
					! 						
					 	· · · · · · · · · · · · · · · · · · ·					

<u> </u>	No.		Commencing (C) 10101		Qty. per Vehicle		Issue		MODIFICATIONS			
Dacking	Item				-	İ	Unit of		Part	Change Point		REMARKS
Packing				•								
Packing—stut pillar body mounting bracket	- 7	Packing—front extension support bracket	AHH5173								.	
## Packing—reas body mounting bracket		Packing—front door post	i AFIH5174	ļ								
Facking - cross-bar cover-plate AHH5177 1 1		Packing—shut pillar body mounting bracket	AHH5175	'								
6 Packing—frame goal-post upright (outer) AHH3178 2 2 7 Rubber sealing strip for body/front frame, side (22') AHH3469 2 2 8 Rubber sealing strip for body/rear frame side (37") AHH3469 2 2 9 Screw for body Elevation Elevati	4	Packing—rear body mounting bracket	AHH5176									
Rubber sealing strip for body/front frame side (22") AHH3408 2 2		Packing—frame goal-post upright (outer)	AHHOITT									
Rubber sealing strip for body/rear frame side (877) AHH5409 2 2 Screw for body PV2205 1.0 10 Washer for screw (plain) PW2205 1.0 10 24 Screw for body to goal-post cross-bar HP20006 3 3 Screw for body to goal-post cross-bar HP20006 2 2 Washer for screw (plain) PW2205 5 5 5 24 Washer for screw (spring) LW2205 5 5 5 24 Screw for body to spring) LW2205 5 5 5 24 Screw for body to spring) LW2205 5 5 24 Screw for body to shur piliar front/rear brackets HP20006 8 8 8 Screw for body to shur piliar front/rear brackets HP20006 8 8 8 Screw for body to shur piliar front/rear brackets HP20006 8 8 8 Swaher for screw (plain—large) PW205 10 10 12 12 12 12 Washer for screw (plain—large) PW205 10 10 12 12 12 12 Washer for screw (plain—mark) PW2105 8 8 Swaher for screw (plain—mark) PW2105 8 8 Swaher for screw (plain—mark) PW2105 8 8 Swaher for screw (plain—mark) PW206 2 2 Washer for screw (plain) PW206 2 2 Washer for screw (plain—mark) PW206 2 2		Rubber sealing strip for body/front frame side (22*)	AHH5408				ļ	ļ · · · · · · · · · · · · · · · · · · ·				
Screw for body HPZ0808 1-10 10 10 10 10 10 10	-	Rubber scaling strip for body/rear frame side (37")	AHH5409	1			!	I .				
Washer for sacrew (plain)		Screw for body	HPZ0508									
Washer for screw (spring)		Washer for screw (plain)	PWZ205	i								
HPZ0508 2 2		Washer for screw (spring)	LWZ205				24					
Washer for screw (plain)		Screw for body to goal-post cross-bar	HPZ0506								.	
Washer for screw (spring)		Screw for body to goal-post cross-bar end	HPZ0508	1				,			.	-!-!
Screw for body to shut pillar front/rear brackets				1				• • • • • • • • • • • • • • • • • • • •			·	-1-4
Screw for body to shut pillar												
1		Screw for body to shut pillar	HPZ0510	1				***************************************				***************************************
19		Washer for screw (spring)	1.1WZ205	1					· j			
Washer for screw (plain—small)		Washer for screw (plain—large)	PWZ205				l .		i			
Nut for body to frout/rear frame brackets		Washer for screw (plain—small)	PWZ105		8,	8	,,.					
Washer for screw (plain)	21	Nut for body to front/rear frame brackets	FNZ105		8		 					
24 Washer for screw (spring) LW205 2 2 24		Screw for body to 4th cross-member		·					. j		.	
Pett—bonnet sealing Rubber—sealing body to cross-bar AHH5528 2 2 3 3 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4		Washer for screw (plain)		ļ		2					.	
Rubber—sealing body to cross-bar AHH5528 2 2 3 4 4 4 5 5 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7		Washer for screw (spring)		ļ								
								:				
	zo	Rubber—searing body to cross-par				2					· [·	
											1	
	l										1	
	ŀ						,					
											t	
	ļ											
				·								
	-	,									·····	
				· ·····								
	-											
										-	1	
	[1							
].				į							
].			ļ							1	
	.										į	
	-											
	-	······································				-						
	Į.	······································										
	į.							,,				
	[!			
	[.	•••••••••••••••••••••••••••••••••••••••			ļi				ł		i	
	Ţ	***************************************										
	ļ	t de la companya de	Ι .	İ	!	;	- 1		1	İ		