



A2969

**SERVICE PARTS LIST**

**THE M.G. Series MGA TWIN CAM**

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>CLUTCH</b>										
	<b>CLUTCH PEDAL AND LINKAGE</b>										
1	Pedal—clutch	AHH5694	E1	1							
2	Pedal—clutch	AHH5696			1						
3	Bush	185794	E2	1	1						
4	Pad for pedal (rubber)	AHH5100	E3	1	1						
5	Spring—pedal pull-off	130154	E4	1	1	6.					
6	Pin—clevis	CLZ0515	E5	1	1						
7	Washer for pin (plain)	PWZ105	E6	1	1						
	<b>MASTER CYLINDER ASSEMBLY</b>										
8	Master cylinder assembly	BHA4072		1	1						
9	Body	17H4476	E7	1	1						
10	Cap—filler	7H4379	E8	1	1						
11	Gasket	7H4726	E9	1	1						
12	Seal—valve	7H4750	E10	1	1						
13	Stem—valve	7H4751	E11	1	1						
14	Spacer—valve	17H4132	E12	1	1						
15	Plunger	17H4510	E13	1	1						
16	Seal—plunger	7H4976	E14	1	1						
17	Spring	7H4944	E15	1	1						
18	Push-rod	17H4544	E16	1	1						
19	Cover—dust	7H4757	E17	1	1						
20	Retainer—spring	7H4755	E18	1	1						
21	Washer—retaining	7H4756	E19	1	1						
22	Circlip	7H4451	E20	1	1						
23	Washer (spring)	7H4752	E21	1	1						
24	Seal—taper end	17H4509	E22	1	1						
25	Bolt fixing cylinder	HZS0510	E23	2	2						
26	Nut for bolt	LNZ205	E24	2	2						
27	Washer for nut (plain)	PWZ105	E25	2	2						
28	Locknut—master cylinder push rod	FNZ205	E42	1	1						
29	Fork end—master cylinder push rod	FEZ105	E43	1	1						
30	Pipe—master cylinder to hose	AHH5822	E26	1							
31	Pipe—master cylinder to hose	AHH5824			1						
32	Hose—clutch	11B5086	E27	1	1						
33	Locknut for hose	BCA4092	E28	1	1						
34	Washer (shakeproof)	2K7131	E29	1	1						
35	Gasket—hose to pipe	3H876	E30	1	1						
36	Clip—clutch pipe to master cylinder base plate	PCR0311	E31	1							
37	Clip—clutch pipe to bulkhead	PCR0311			2						

**SERVICE PARTS LIST**

**THE M.G. Series MGA TWIN CAM**

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>SLAVE CYLINDER ASSEMBLY</b>										
1	<b>Slave cylinder assembly</b>	<b>BHA4073</b>		<b>1</b>	<b>1</b>						
2	Body	N.S.P.	E32	1	1						
3	Seal	17H4827	E33	1	1						
4	Plunger	N.S.P.	E34	1	1						
5	Cover—dust	17H4010	E35	1	1						
6	Spring	7H4970	E36	1	1						
7	Screw—bleed	7H4973	E37	1	1						
8	Ball—bleed screw	7H4030	E38	1	1						
9	Cap—bleed screw dust	7H4419	E39	1	1						
10	Circlip	17H4011	E40	1	1						
11	Push-rod—slave cylinder	BHA4074	E41	1	1						
12	Banjo	3H868	E44	1	1						
13	Bolt for banjo	2F5276	E45	1	1						
14	Gasket for banjo	17H4021	E46	1	1						
15	Gasket for banjo	17H4179	E47	1	1						
16	Bolt fixing cylinder	AHH5762	E48	2	2						
17	Washer for bolt (spring)	LWZ206	E49	2	2						
18	<b>Service kit for slave cylinder</b>	<b>8G8249</b>		<b>1</b>	<b>1</b>						
19	Seal			1	1						<b>Correction. Was 17H4414</b>
20	Cover—dust			1	1						
21	Ball—bleed screw			1	1						
22	Cap—bleed screw dust			1	1						
23	Circlip			1	1						

