



A3031

**SERVICE PARTS LIST**

**THE M.G. Series MGA TWIN CAM**

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>CHASSIS FRAME</b>										
1	Frame—chassis	<b>AHH5708</b>	<b>Q1</b>	1	1						
2	Plate assembly—toeboard support	AHH5293	Q2	1	1						
3	Screw—toeboard plate to goalpost	HPZ0406	Q3	9	9						
4	Washer for screw (spring)	LWZ204	Q4	9	9	12					
5	Washer for screw (plain)	PWZ104	Q5	9	9	12					
6	Cover-plate—goalpost—R.H.	AHH5343		1	1						
7	Cover-plate—goalpost—L.H.	AHH5344	Q6	1	1						
8	Seal—cover-plate—lower (felt)	AHH5345	Q7	2	2						
9	Seal—cover-plate—upper (felt)	AHH5346	Q8	2	2						
10	Screw—cover-plate to goalpost	CTZ803	Q9	6	6						
11	Screw—cover-plate to goalpost stay	PTZ1003	Q10	8	8						
12	Screw—cover-plate to goalpost stay	PTZ1005	Q11	2	2						
13	Washer for screw (plain)	PWZ203	Q12	2	2						
14	<b>Extension assembly (front)</b>	<b>AHH5129</b>	<b>Q13</b>	1	1			<b>AHH5924</b>	<b>Com. (C) 2275</b>		
15	Screw—extension to frame bracket	HZS0606	Q14	8	8						
16	Nut for screw	FNZ106	Q15	8	8						
17	Washer for screw (spring)	LWZ206	Q16	8	8						
18	<b>Bracket assembly—bumper support—R.H.</b>	<b>AHH5139</b>		1	1						
19	<b>Bracket assembly—bumper support—L.H.</b>	<b>AHH5140</b>	<b>Q17</b>	1	1						
20	Screw—bracket assembly to front extension	HZS0506	Q18	6	6						
21	Nut for screw	FNZ105	Q19	6	6						
22	Washer for screw (spring)	LWZ205	Q20	6	6	24					
23	Nut for rebound strap spindle	FNZ106	Q21	2	2						
24	Washer for nut (spring)	LWZ206	Q22	2	2						
25	Washer for nut (plain)	PWZ206	Q23	2	2						
26	Bracket assembly—abutment (starter switch)	AHH5809	Q24	1	1						

**SERVICE PARTS LIST**

**THE M.G. Series MGA TWIN CAM**

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>BODY MOUNTING</b>										
1	Packing—front extension support bracket .....	AHH5173	Q25	2	2						
2	Packing—front door post bracket .....	AHH5174	Q26	2	2						
3	Packing—shut pillar body mounting bracket .....	AHH5175	Q27	2	2						
4	Packing—rear body mounting bracket .....	AHH5176	Q28	2	2						
5	Packing—cross-bar cover-plate .....	AHH5781	Q29	1	1						
6	Packing—frame goalpost upright (outer) .....	AHH5178	Q30	2	2						
7	Strip—sealing—body to frame side—front (rubber) .....	AHH5408	Q31	2	2						
8	Strip—sealing—body to frame side—rear (rubber) .....	AHH5409	Q32	2	2						
9	Screw—body to goalpost upright .....	HPZ0508	Q33	8	8						
10	Screw—body to chassis side-member .....	HPZ0508	Q34	2	2						
11	Washer for screw (plain) .....	PWZ205	Q35	10	10						
12	Washer for screw (spring) .....	LWZ205	Q36	10	10	24					
13	Screw—body to goalpost cross-bar .....	HPZ0506	Q37	3	3						
14	Screw—body to goalpost cross-bar end .....	HPZ0508	Q38	2	2						
15	Washer for screw (plain) .....	PWZ205	Q39	5	5						
16	Washer for screw (spring) .....	LWZ205	Q40	5	5	24					
17	Screw—body to front and rear frame bracket .....	HPZ0508	Q41	8	8						
18	Screw—body to shut pillar .....	HPZ0510	Q42	2	2						
19	Washer for screw—small (plain) .....	PWZ105	Q43	8	8						
20	Washer for screw—large (plain) .....	PWZ205	Q44	10	10						
21	Washer for screw (spring) .....	LWZ205	Q45	10	10	24					
22	Nut for screw .....	FNZ105	Q46	8	8						
23	Screw—body to 4th cross-member .....	HPZ0506	Q47	2	2						
24	Washer for screw (plain) .....	PWZ206	Q48	2	2						
25	Washer for screw (spring) .....	LWZ205	Q49	2	2	24					
26	Strip—sealing—body to cross-bar (rubber) .....	AHH5528	Q50	2	2						

