


TOEBOARD/FIREWALL PANEL - VIEW FROM FRONT

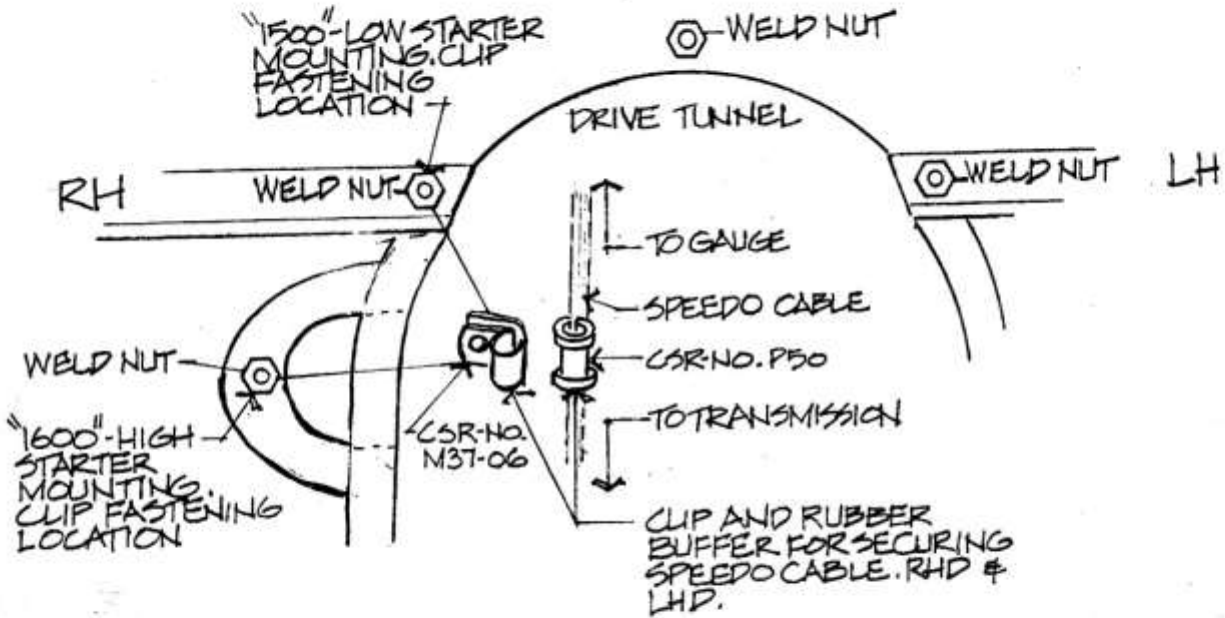

SPEEDO CABLE MOUNTING LOCATION 1500 & 1600

CABLE IS FASTENED BY BUFFER AND CLIP ON END OF FLOORBOARD SCREW - LONGER SCREW USED HERE - LOCKING WASHER & NUT

HEATER CONTROL CABLES - PUSHROD CARS

