


# LUCAS

## SECTION

### J

## SIDE LAMPS, SIDE/FLASHER AND FRONT FLASHER LAMPS

### COMBINED SIDE AND FLASHER LAMPS

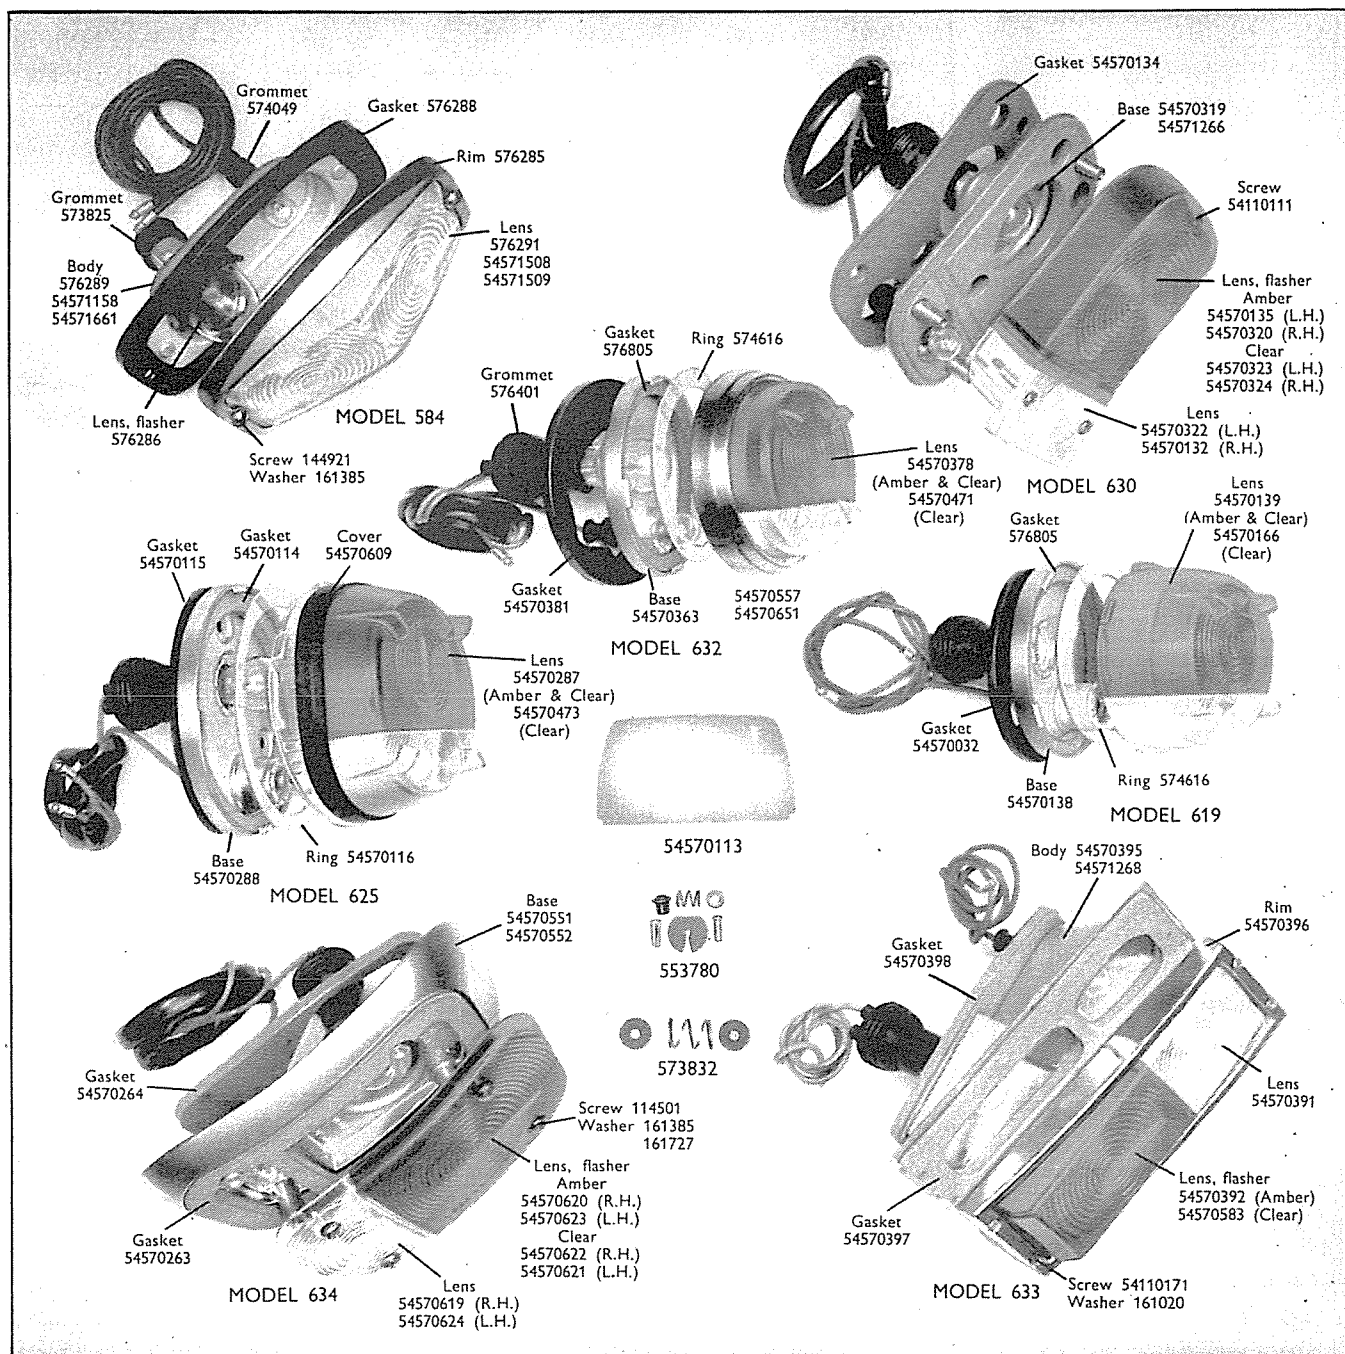



# COMBINED SIDE AND FLASHER LAMPS

(with twin bulbs and lens arrangement)

## DETAILED SPARE PARTS

Part No. . . . .	52312A/B	52407A	52408A/B	52416A/B	52422B/F	52423B/F	52425A/D
Model . . . . .	L584	L619	L619	L625	L630	L630	L632
Finish . . . . .	C.P.R.	—	—	—	—	—	C.P.R.
§Rim or door . . . . .	576285	—	—	—	—	—	‡54570557
§Screw, rim or lens fixing . . . . .	144921	—	—	—	54110111	54110111	—
Washer, retaining . . . . .	161385	—	—	—	—	—	—
§Lens, side . . . . .	576291	54570139	54570166	54570287	54570322	54570322	54570378
Gasket, lens seating . . . . .	576288	576805	576805	54570114	54570134	54570134	576805
§Lens, flasher . . . . .	576286	—	—	—	54570135	54570323	—
§Ring, sliding . . . . .	—	574616	574616	54570116	—	—	574616
Shield, lens . . . . .	—	—	—	54570113	—	—	—
§Interior, bulb holder, side . . . . .	553780	553780	553780	553780	553780	553780	553780
§Interior, bulb holder, flasher . . . . .	573832	573832	573832	573832	573832	573832	573832
§Bulb, side . . . . .	222	989	989	989	989	989	989
§Bulb, flasher . . . . .	382	382	382	382	382	382	382
§Gasket, body or lamp seating . . . . .	—	54570032	54570032	54570115	54570134	54570134	54570381
§Grommet, side . . . . .	574049	574049	574049	574049	574049	574049	574049
§Grommet, flasher . . . . .	573825	576401	576401	576401	576401	576401	576401
Body or base . . . . .	576289	54570138	54570138	54570288	54570319	54570319	54570363
Cover, lens . . . . .	—	—	—	54570609	—	—	—

Part No. . . . .	52427B/F	52428B/F	52429A/B	52430A/E	‡52431A/E	52432A/E	52433A/E
Model . . . . .	L630	L630	L625	L632	L633	L634	L634
Finish . . . . .	—	—	—	C.P.R.	C.P.R.	C.P.R.	C.P.R.
Replaced by (see footnote) . . . . .	—	—	—	—	(52491)	—	—
§Rim or door . . . . .	—	—	—	‡54570651	54570396	—	—
§Screw, rim or lens fixing . . . . .	54110111	54110111	—	—	54110171	114501	114501
Washer, retaining . . . . .	—	—	—	—	161020	161385	161385
Washer, fibre or leatheroid . . . . .	—	—	—	—	—	161727	161727
§Lens, side . . . . .	54570132	54570132	54570473	54570471	54570391	54570624	54570619
Gasket, lens seating . . . . .	54570134	54570134	54570114	576805	54570397	54570263	54570263
§Lens, flasher . . . . .	54570320	54570324	—	—	54570392	54570623	54570620
§Ring, sliding . . . . .	—	—	54570116	574616	—	—	—
Shield, lens . . . . .	—	—	54570113	—	—	—	—
§Interior, bulb holder, side . . . . .	553780	553780	553780	553780	553780	553780	553780
§Interior, bulb holder, flasher . . . . .	573832	573832	573832	573832	573832	573832	573832
§Bulb, side . . . . .	989	989	989	989	989	989	989
§Bulb, flasher . . . . .	382	382	382	382	382	382	382
§Gasket, body or lamp seating . . . . .	54570134	54570134	54570115	54570381	54570398	54570264	54570264
§Grommet, side . . . . .	574049	574049	574049	574049	574049	574049	574049
§Grommet, flasher . . . . .	576401	576401	576401	576401	576401	576401	576401
Body or base . . . . .	54570319	54570319	54570288	54570363	54570395	54570551	54570552
Cover, lens . . . . .	—	—	54570609	—	—	—	—

For illustrations, see page J1


Note. For replacement lamp spare parts, see appropriate column under part number  
 § Recommended spares for stock C.P.R. . . . Chromium plated rim

‡ When ordering, quote part number shown in brackets

‡ Rim and lens

# COMBINED SIDE AND FLASHER LAMPS

(with twin bulbs and lens arrangement)



## DETAILED SPARE PARTS

Part No. . . . .	52434A/E	52435A/E	†52446A/E	†52478A	52491A	52492A
Model . . . . .	L634	L634	L633	L584	L633	L633
Finish . . . . .	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.
Replaced by (see footnote) . . . . .	—	—	(52492)	(52493)	—	—
§Rim or door . . . . .	—	—	54570396	576285	54570396	54570396
§Screw, rim or lens fixing . . . . .	114501	114501	54110171	144921	54110171	54110171
Washer, retaining . . . . .	161385	161385	161020	161385	161020	161020
Washer, fibre or leatheroid . . . . .	161727	161727	—	—	—	—
§Lens, side . . . . .	54570624	54570619	54570391	576291	54570391	54570391
Gasket, lens seating . . . . .	54570263	54570263	54570397	576288	54570397	54570397
§Lens, flasher . . . . .	54570621	54570622	54570583	—	54570392	54570583
§Interior, bulb holder, side . . . . .	553780	553780	553780	553780	553780	553780
§Interior, bulb holder, flasher . . . . .	573832	573832	573832	573832	573832	573832
§Bulb, side . . . . .	989	989	989	222	989	989
§Bulb, flasher . . . . .	382	382	382	382	382	382
§Gasket, body or lamp seating . . . . .	54570264	54570264	54570398	—	54570398	54570398
§Grommet, side . . . . .	574049	574049	574049	574049	574049	574049
§Grommet, flasher . . . . .	576401	576401	576401	573825	576401	576401
Body or base . . . . .	54570551	54570552	54570395	54571158	54571268	54571268


Part No. . . . .	52493B	52506B	52507B	52508B	52509B
Model . . . . .	L659	L584	L584	L584	L584
Finish . . . . .	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.
§Rim or door . . . . .	54571591	576285	576285	576285	576285
§Screw, rim or lens fixing . . . . .	144921	144921	144921	144921	144921
Washer, retaining . . . . .	161385	161385	161385	161385	161385
§Lens, side . . . . .	54571328	54571509	54571508	54571509	54571508
Gasket, lens seating . . . . .	576288	576288	576288	576288	576288
§Lens, flasher . . . . .	—	576286	576286	—	—
§Interior, bulb holder, side . . . . .	573828	553780	553780	553780	553780
§Interior, bulb holder, flasher . . . . .	—	573832	573832	573832	573832
§Bulb, side . . . . .	380	222	222	222	222
§Bulb, flasher . . . . .	—	382	382	382	382
§Gasket, body or lamp seating . . . . .	—	—	—	—	—
§Grommet, side . . . . .	—	574049	574049	574049	574049
§Grommet, flasher . . . . .	573825	573825	573825	573825	573825
Body or base . . . . .	54571329	54571661	54571661	54571661	54571661

For illustrations, see page J1

Note. For replacement lamp spare parts, see appropriate column under part number    † When ordering, quote part number shown in brackets  
 § Recommended spares for stock    C.P.R. . . Chromium plated rim



# FRONT FLASHER LAMPS

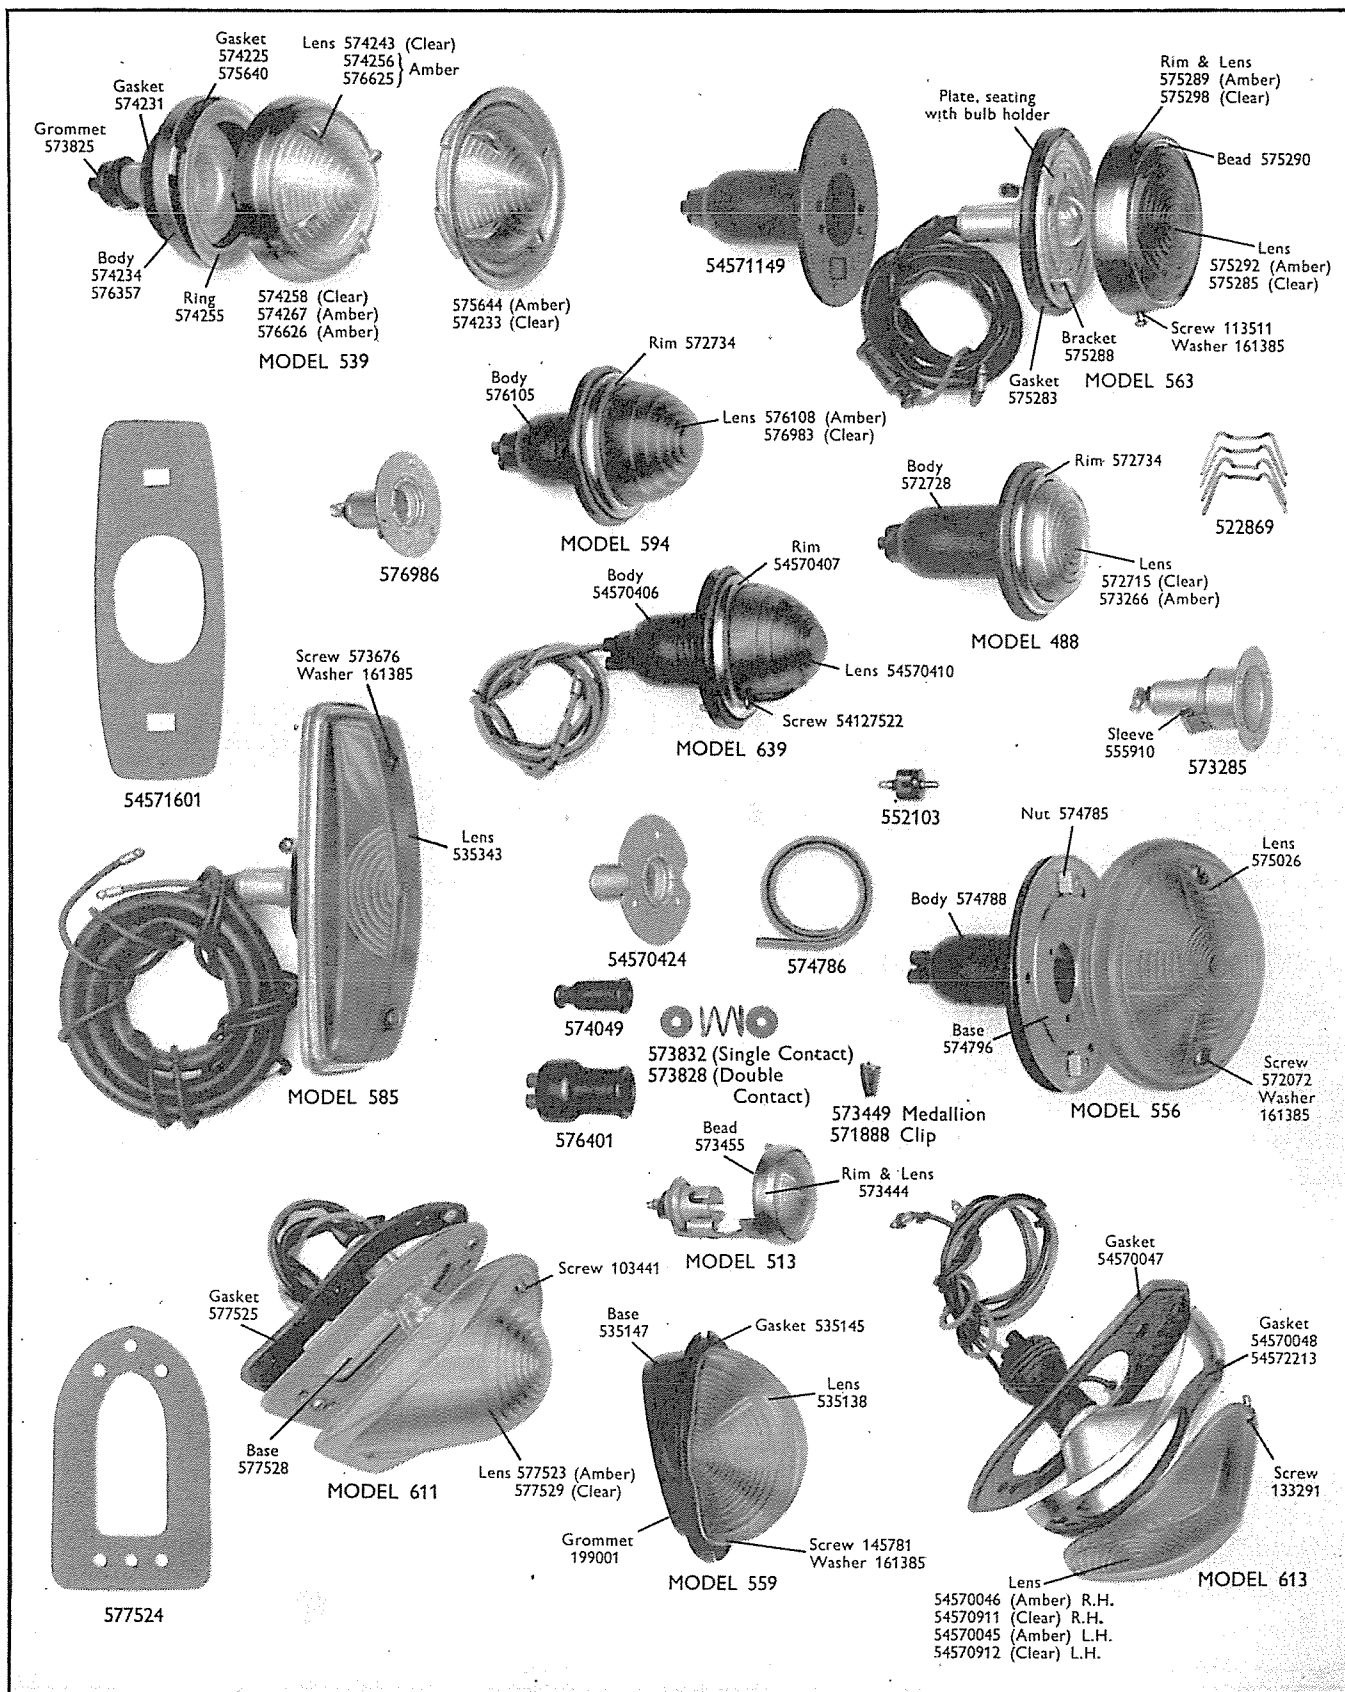

DETAILED SPARE PARTS

Part No. . . . .	†52213A/B	†52246A/D	52271A/B	†52272B/D	†52278B/D	†52282A/B	52285B/D	52287A/D	52288A/D	†52296A/B
Model . . . . .	539	488	563	538	539	539	488	539	539	539
Finish . . . . .	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.
Replaced by (see footnote) . . . . .	(52369)	(52285)	—	(53626)	(53626)	(53626)	—	—	—	(52371)
§Rim or door . . . . .	†574233	572734	†575289	†574267	†574267	†574267	572734	†576626	†576626	†575644
Screw, lens or rim fixing . . . . .	—	—	113511	—	—	—	—	—	—	—
Washer, retaining . . . . .	—	—	161385	—	—	—	—	—	—	—
Bracket, rim fixing . . . . .	—	—	575288	—	—	—	—	—	—	—
§Lens or glass . . . . .	574243	572715	575292	574256	574256	574256	572715	576625	576625	574256
Wire, lens retaining . . . . .	—	—	522869	—	—	—	—	—	—	—
§Gasket, lens seating . . . . .	575640	—	575290	575640	575640	575640	—	575640	575640	575640
§Ring, sliding . . . . .	574255	—	—	574255	574255	574255	—	574255	574255	574255
§Bulb holder . . . . .	—	573285	—	—	—	—	573285	—	—	—
§Interior, bulb holder . . . . .	573832	552103	573832	573832	573832	573832	552103	573832	573832	573832
Plate or base, with bulb holder . . . . .	—	—	575294	—	—	—	—	—	—	—
§Body . . . . .	574234	575003	—	574234	574234	574234	575003	—	—	574234
§Gasket, body seating . . . . .	574231	—	575283	574231	574231	574231	—	574231	574231	574231
§Bulb . . . . .	382	382	382	382	382	382	382	382	382	382
§Grommet . . . . .	573825	—	574049	—	—	—	—	—	—	573825
§Sleeve, terminal . . . . .	—	555910	188818	—	—	—	555910	—	—	—

Part No. . . . .	52314A/B	52315A/B	52331B	52332B	52337A/B	†52339A	52343A/B	52345A/B	†52346A	52369A
Model . . . . .	L585	L585	539	539	L594	538	563	L594	L539	539
Finish . . . . .	—	—	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.
Replaced by (see footnote) . . . . .	—	—	—	—	—	(53626)	—	—	(53626)	—
§Rim or door . . . . .	—	—	†574267	†574267	572734	†574267	†575298	572734	†574267	†574233
Screw, lens or rim fixing . . . . .	573676	573676	—	—	—	—	113511	—	—	—
Washer, retaining . . . . .	161385	161385	—	—	—	—	161385	—	—	—
Bracket, rim fixing . . . . .	—	—	—	—	—	—	575288	—	—	—
§Lens or glass . . . . .	535343	535343	574256	574256	576108	574256	575285	576983	574256	574243
Wire, lens retaining . . . . .	—	—	—	—	—	—	522869	—	—	—
§Gasket, lens seating . . . . .	54571601	54571601	575640	575640	—	575640	575290	—	575640	575640
§Ring, sliding . . . . .	—	—	574255	574255	—	574255	—	—	574255	574255
§Bulb holder . . . . .	—	—	—	—	576986	—	—	576986	—	—
§Interior, bulb holder . . . . .	573832	573832	573832	573832	552103	573832	573832	552103	573832	573832
Plate or base, with bulb holder . . . . .	—	—	—	—	—	—	575294	—	—	—
§Body . . . . .	—	—	—	—	576105	574234	—	576105	576357	574234
§Gasket, body seating . . . . .	—	—	574231	574231	—	574231	575283	—	574231	574231
§Bulb . . . . .	382	339	382	382	382	382	382	382	382	382
§Grommet . . . . .	—	—	—	—	—	—	574049	—	573825	576401
§Sleeve, terminal . . . . .	555910	555910	—	—	555910	—	188818	555910	—	—

Note. For replacement lamp spare parts, see appropriate column under part number  
 C.P.R. . . Chromium plated rim

† When ordering, quote part number shown in brackets    ‡ Rim and lens    § Recommended spares for stock

FRONT FLASHER LAMPS

52213 — 52369

DETAILED SPARE PARTS

FRONT FLASHER LAMPS

Part No. . . . .	52371A	52392A/B	52393A/B	52410B/H	52411B/H	52424A	52438A/D	52440A/B	52457A/D	52458A/D	‡52462A
Model . . . . .	539	611	611	L613	L613	559	L639	L539	L613	L613	L539
Finish . . . . .	C.P.R.	—	—	—	—	—	C.P.R.	C.P.R.	—	—	C.P.R.
Replaced by (see footnote) . .	—	—	—	—	—	—	—	—	—	—	(53626)
§Rim or door . . . . .	‡575644	—	—	—	—	—	54570407	‡574258	—	—	‡574267
Screw, lens or rim fixing . . .	—	103441	103441	133291	133291	145781	54127522	—	133291	133291	—
Washer, retaining . . . . .	—	—	—	—	—	161775	—	—	—	—	—
§Lens or glass . . . . .	574256	577523	577529	54570046	54570045	535138	54570410	574243	54570911	54570912	574256
§Gasket, lens seating . . . . .	575640	577524	577524	54572213	54570048	535145	—	574225	54572213	54570048	575640
§Ring, sliding . . . . .	574255	—	—	—	—	—	—	574255	—	—	574255
§Interior, bulb holder . . . . .	573832	573832	573832	573832	573832	—	573832	573832	573832	573832	573832
Plate or base, with bulb holder	—	577528	577528	—	—	535147	54570424	—	—	—	—
§Body . . . . .	574234	—	—	—	—	—	54570406	576357	—	—	574234
§Gasket, body seating . . . . .	574231	577525	577525	54570047	54570047	—	—	574231	54570047	54570047	574231
§Bulb . . . . .	382	382	382	382	382	382	382	382	382	382	382
§Grommet . . . . .	576401	—	—	576401	576401	199001	—	573825	576401	576401	—
§Sleeve, terminal . . . . .	—	—	—	555910	555910	188818	555910	—	555910	555910	—


  

Part No. . . . .	‡52464A	52475A	52476A	52479A	52480A	52500A	53358D	53359A/E	53378A	53626A	53627A
Model . . . . .	L539	L539	L539	L563	L563	513	556	488	539	L539	539
Finish . . . . .	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.	—	C.P.R.	C.P.R.	C.P.R.	C.P.R.
Replaced by (see footnote) . .	(53627)	—	—	—	—	—	—	—	—	—	—
§Rim or door . . . . .	‡574258	‡574258	‡574258	‡575289	‡575298	‡573444	—	572734	‡574258	‡574267	‡574258
Screw, lens or rim fixing . . .	—	—	—	113511	113511	—	572072	—	—	—	—
Washer, retaining . . . . .	—	—	—	161385	161385	—	161385	—	—	—	—
Bracket, rim fixing . . . . .	—	—	—	575288	575288	—	161727	—	—	—	—
§Lens or glass . . . . .	574243	574243	574243	575292	575285	—	575026	573266	574243	574256	574243
Wire, lens retaining . . . . .	—	—	—	522869	522869	—	¶169706	—	—	—	—
§Gasket, lens seating . . . . .	575640	575640	575640	575290	575290	—	574786	—	575640	575640	575640
§Ring, sliding . . . . .	574255	574255	574255	—	—	573455	—	—	574255	574255	574255
§Bulb holder . . . . .	—	—	—	—	—	—	—	573285	—	—	—
§Interior, bulb holder . . . . .	573832	573832	573832	573832	573832	552103	552103	552103	573832	573832	573832
Plate or base, with bulb holder	—	—	—	54571528	54571528	—	574796	—	—	—	—
§Body . . . . .	576357	576357	576357	54571149	54571149	—	574788	575003	574234	576357	576357
§Gasket, body seating . . . . .	574231	574231	574231	—	—	—	—	—	574231	—	574231
§Bulb . . . . .	382	382	382	382	382	382	382	382	382	382	382
§Grommet . . . . .	—	—	—	—	—	—	—	—	—	576401	576401
§Sleeve, terminal . . . . .	—	—	—	188818	188818	555910	555910	555910	—	—	—
Medallion, indicator . . . . .	—	—	—	—	—	§573449	—	—	—	—	—
Clip, medallion fixing . . . . .	—	—	—	—	—	§571888	—	—	—	—	—

Note. For replacement lamp spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Rim and lens  
 § Recommended spares for stock || Washer, leatheroid ¶ Nut, lens fixing screw § Order separately C.P.R. . . Chromium plated rim

For illustrations, see page J4


# SIDE LAMPS

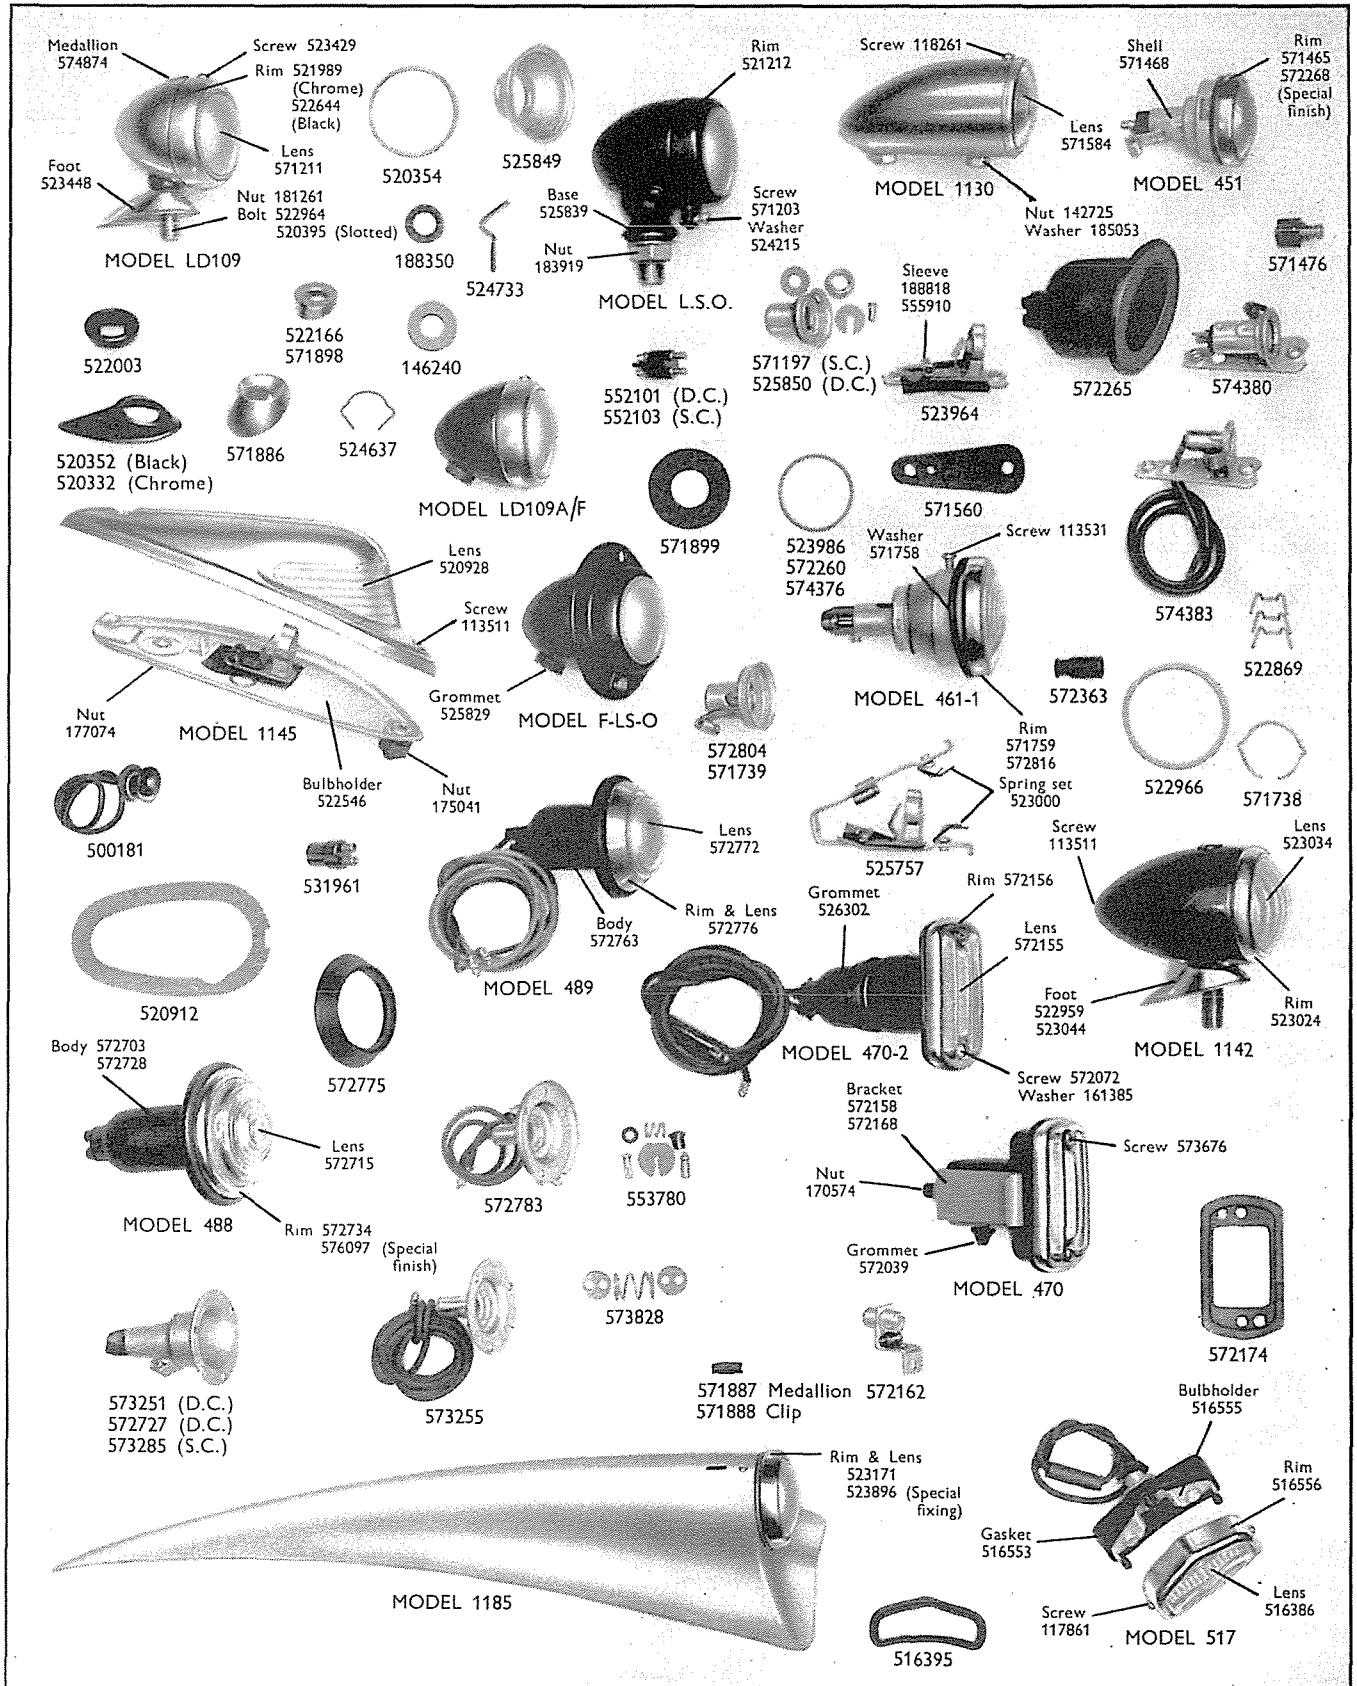





# SIDE LAMPS

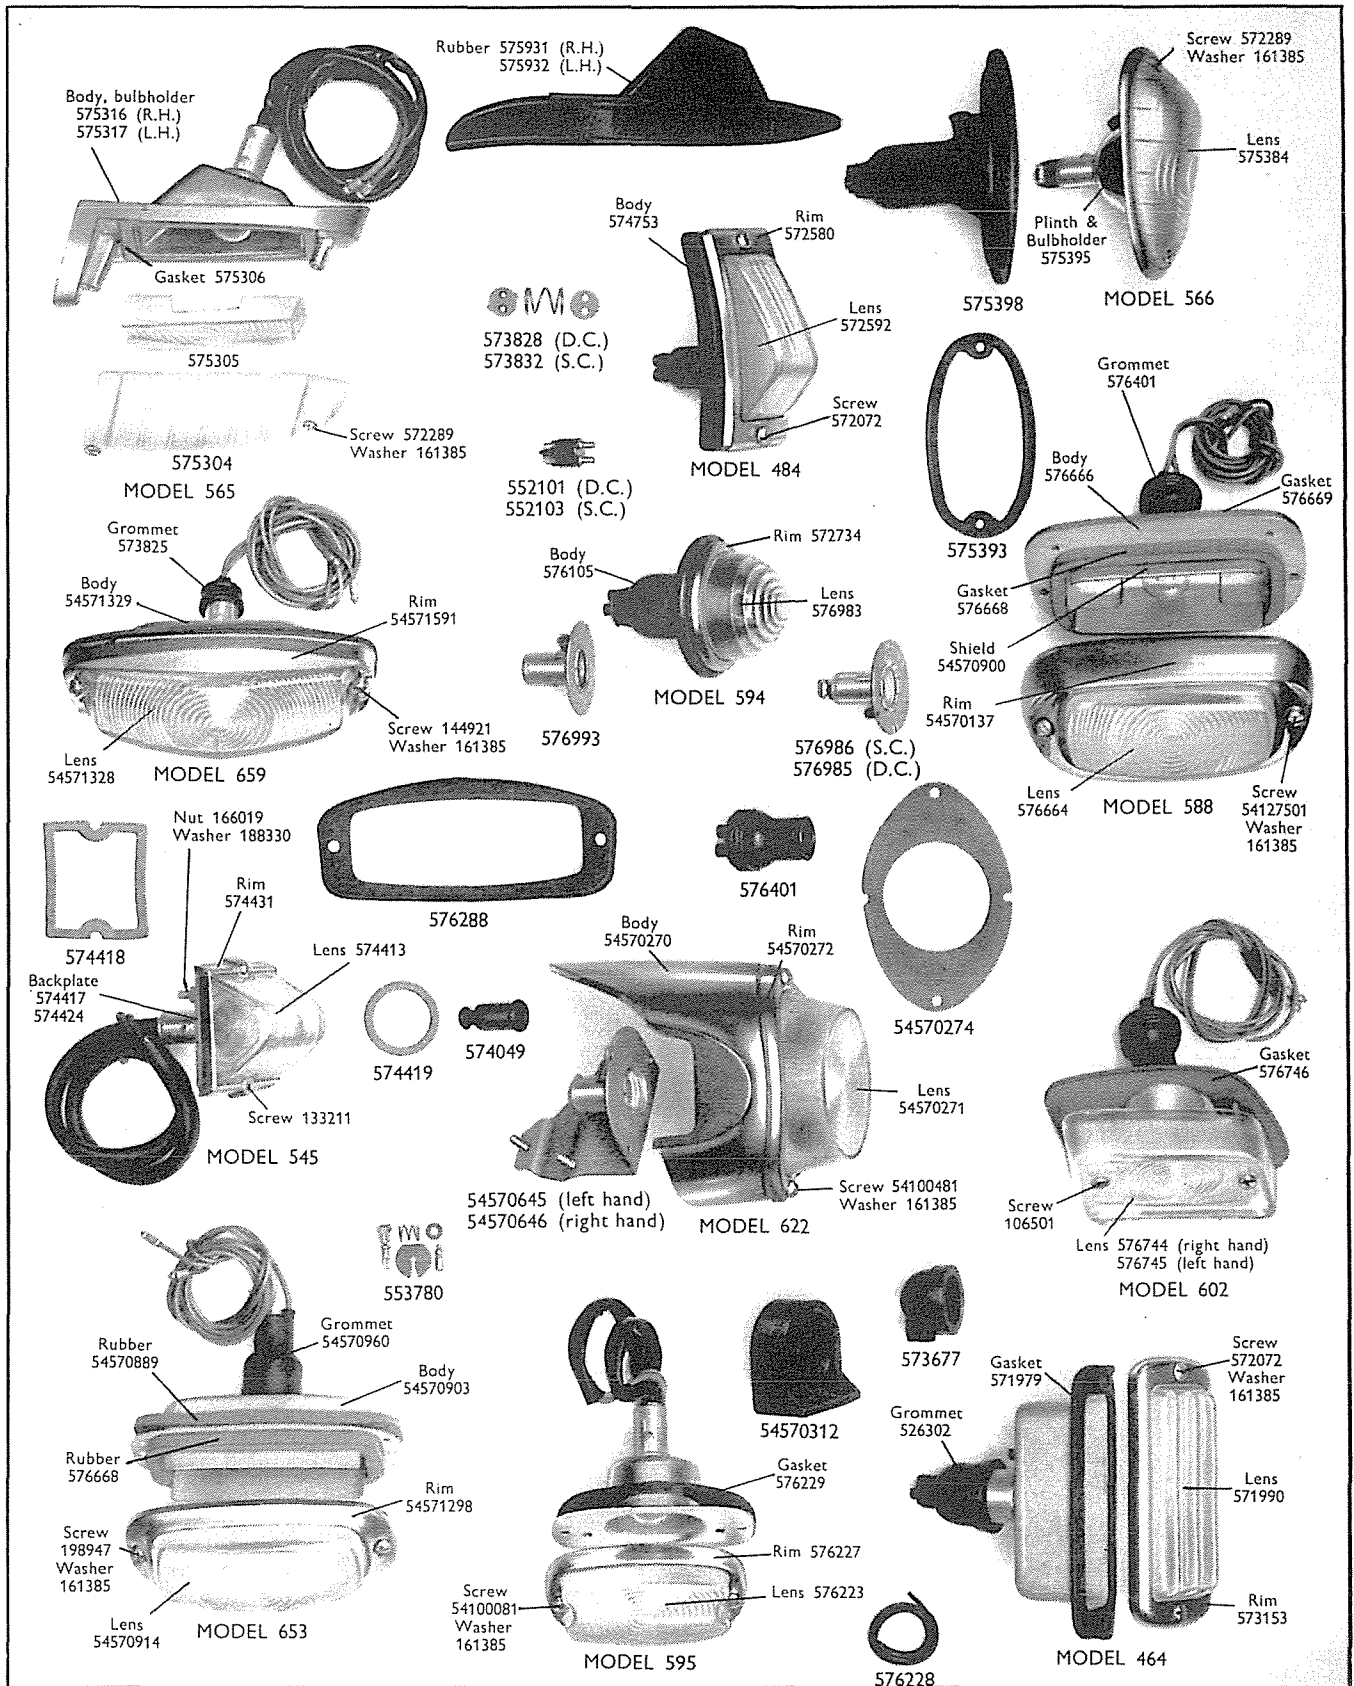

DETAILED SPARE PARTS

J10

52003 — 52040

Part No. . . . .	†52003A/B	†A52003A	†52026A	†52027A	†52029A	52030A	†52032A	52034A	52036A	A52036A	†52040A/B	A52040A/B
Model . . . . .	LD109A	LD109A	LBD109A	LBD109A	LBD109A	1130	1142	L-S-O	L-S-O	L-S-O	LBD109A	LBD109A
Finish . . . . .	Black	Black	Chromium	Chromium	Chromium	Chromium	Chromium	Black	Black	Black	Chromium	Chromium
Replaced by (see footnote) . . . . .	(52153)	(52522)	(52156)	(52157)	(52057)	—	(52164)	—	—	—	(52157)	(A52157)
§Rim or door . . . . .	522644	522644	521989	521989	521989	—	523024	571212	571212	571212	521989	521989
§Screw, rim or lens fixing . . . . .	523429	523429	523429	523429	523429	118261	—	571203	571203	571203	523429	523429
Washer or ring, retaining . . . . .	—	—	—	—	—	—	—	524215	524215	524215	—	—
§Springs, set, lens fixing . . . . .	522869	522869	522869	522869	522869	—	523000	522869	522869	522869	522869	522869
Bracket or plate, rim fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Lens or glass . . . . .	571211	571211	571211	571211	571211	571584	523034	571211	571211	571211	571211	571211
§Lens plate or cover . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Gasket, lens seating . . . . .	520354	520354	520354	520354	520354	—	522966	520354	520354	520354	520354	520354
Ring, sliding . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Bulb holder . . . . .	571197	571197	571197	571197	571197	523964	525757	—	—	—	571197	571197
§Interior . . . . .	—	—	—	—	—	—	—	552101	552103	552103	—	—
Screw or nut, bulb holder fixing . . . . .	—	—	—	—	—	—	113511	—	—	—	—	—
Shell . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Reflector . . . . .	525849	525849	525849	525849	525849	—	—	525849	525849	525849	525849	525849
§Spring, adaptor fixing . . . . .	524637	524637	524637	524637	524637	—	—	524637	524637	524637	524637	524637
Backplate . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Gasket, backplate body seating . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Nut, backplate fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Bulb . . . . .	207	200	207	207	207	207	207	209	207	200	207	200
Body or bracket, bulb holder . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Body, rubber . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, lamp fixing . . . . .	181261	181261	181261	181261	181261	—	181261	183919	183919	183919	181261	181261
Washer, lamp seating or base . . . . .	—	—	—	—	—	—	—	188349	188349	188349	146240	146240
Screw, lamp fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Washer, distance . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Washer, shakeproof . . . . .	188350	188350	188350	188350	188350	—	188350	—	—	—	188350	188350
Base, lamp seating . . . . .	522003	522003	—	522003	—	571560	—	525839	525839	525839	522003	522003
Foot, lamp seating . . . . .	—	—	523448	—	520352	—	522959	—	—	—	—	—
Bolt, lamp fixing . . . . .	520395	520395	522964	522964	522964	—	522964	—	—	—	520395	520395
§Grommet, rubber . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Ring, rubber . . . . .	—	—	—	—	—	523986	—	—	—	—	—	—
§Sleeve, terminal . . . . .	—	—	—	—	—	188818	—	—	—	—	—	—
Medallion or indicator tell-tale . . . . .	524874	524874	524874	524874	524874	524874	524874	—	—	—	524874	524874
Clip, medallion fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Bracket, clamp . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Screw, stirrup fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Terminal, earthing . . . . .	524733	524733	524733	524733	524733	—	—	—	—	—	524733	524733

(including lamps with flasher indicating double filament bulbs)

SIDE LAMPS

Note. For replacement lamp spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

DETAILED SPARE PARTS

Part No. . . . .	†52042A	†52043A	†52044A/B	52047A	†52051A	†52052A	†52053A	52057A	†52058A	†52059A	†52060A	†52066A
Model . . . . .	1142	1185	LBD109A	451	1142	1142	1145	LBD109A	1142	1130	1142	LD109A
Finish . . . . .	Chromium	C.P.R.	Chromium	C.P.R.	Chromium	Black, C.P.R.	Black	Chromium	Primer, C.P.R.	Black, C.P.R.	Chromium	Black, C.P.R.
Replaced by (see footnote) . . . . .	(52164)	(52137)	(52156)	—	(52164)	(52121)	(52070)	—	(52121)	(52260)	(52164)	(52154)
§Rim or door . . . . .	523024	‡532171	521989	571465	523024	523024	—	521989	523024	—	523024	521989
§Screw, rim or lens fixing . . . . .	—	—	523429	—	—	—	—	523429	—	118261	—	523429
Washer or ring, retaining . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Springs, set, lens fixing . . . . .	523000	—	522869	—	523000	523000	—	522869	523000	—	523000	522869
Bracket or plate, rim fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Lens or glass . . . . .	523034	—	571211	—	523034	523034	520928	571211	523034	571584	523034	571211
§Lens plate or cover . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Gasket, lens seating . . . . .	522966	—	520354	—	522966	522966	520912	520354	522966	—	522966	520354
Ring, sliding . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Bulb holder . . . . .	525757	—	571197	—	525757	525757	522546	571197	525757	523964	525757	571197
§Interior . . . . .	—	500181	—	552103	—	—	—	—	—	—	—	—
Screw or nut, bulb holder fixing . . . . .	113511	—	—	—	113511	113511	113511	—	113511	—	113511	—
Shell . . . . .	—	—	—	571468	—	—	—	—	—	—	—	—
§Reflector . . . . .	—	—	525849	—	—	—	—	525849	—	—	—	525849
§Spring, adaptor fixing . . . . .	—	—	524637	524637	—	—	—	524637	—	—	—	524637
Backplate . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Gasket, backplate body seating . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Nut, backplate fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Bulb . . . . .	207	207	207	207	207	207	207	207	207	207	207	207
Body or bracket, bulb holder . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Body, rubber . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, lamp fixing . . . . .	181261	—	181261	—	181261	181261	177074	181261	181261	—	181261	181261
Washer, lamp seating or base . . . . .	—	—	—	—	—	—	185061	—	—	—	—	—
Screw, lamp fixing . . . . .	—	—	—	571475	—	—	175041	—	—	—	—	—
Washer, distance . . . . .	—	—	—	—	—	—	—	—	—	—	—	522166
Washer, shakeproof . . . . .	188350	—	188350	—	188350	188350	185053	188350	188350	—	188350	188350
Base, lamp seating . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Foot, lamp seating . . . . .	522959	—	523448	—	522959	522959	—	520332	522959	—	522964	520352
Bolt, lamp fixing . . . . .	522964	—	520395	—	522964	522964	—	520395	522964	—	522964	522964
§Grommet, rubber . . . . .	—	—	—	—	572363	—	—	—	—	—	—	—
§Ring, rubber . . . . .	—	523986	—	523986	—	—	—	—	—	523986	—	—
§Sleeve, terminal . . . . .	—	—	—	188818	—	—	—	—	—	188818	—	—
Medallion or indicator tell-tale . . . . .	524874	571887	524874	—	524874	524874	—	524874	524874	524874	524874	524874
Clip, medallion fixing . . . . .	—	571888	—	—	—	—	—	—	—	—	—	—
Bracket, clamp . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Screw, stirrup fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Terminal, earthing . . . . .	—	—	524733	—	—	—	—	524733	—	—	—	524733

(including lamps with flasher indicating double filament bulbs)

SIDE LAMPS

52042 — 52066

Note. For replacement lamp spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ With lens § Recommended spares for stock  
 || Supplied separately C.P.R. . . Chromium plated rim.

continued

DETAILED SPARE PARTS

J12

52066 — 52089

SIDE LAMPS  
(including lamps with flasher indicating double filament bulbs)

Part No. . . . .	†A.52066A	†52067A	†52068A	52070A	†52071A	†52074A/B	†52078A	†52079A/B	52081F	†52084A	52088E/F	†52089A
Model . . . . .	LD109A	LBD109A	LBD109A	1145	1142	LD109A	LBD109 A/S	LD109A	VF46-15	1148	R451	1148
Finish . . . . .	Black, C.P.R.	Chromium	Chromium	Chromium	Chromium	Black	Chromium	Black, C.P.R.	C.P.R.	Chromium	C.P.R.	Chromium
Replaced by (see footnote) . . . . .	(52523)	(52156)	(52157)	—	(52164)	(52153)	(52057)	(52154)	—	(52164)	—	(52164)
§Rim with lens . . . . .	—	—	—	—	—	—	—	—	572458	—	—	—
§Rim or door . . . . .	521989	521989	521989	—	523024	522644	521989	521989	—	—	572268	—
§Screw, rim or lens fixing . . . . .	523429	523429	523429	—	—	523429	523429	523429	572457	—	—	—
§Springs, set, lens fixing . . . . .	522869	522869	522869	—	523000	522869	522869	522869	—	—	—	—
§Lens or glass . . . . .	571211	571211	571211	520928	523034	571211	571211	571211	573330	524327	—	524327
§Lens plate or cover . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Gasket, lens seating . . . . .	520354	520354	520354	520912	522966	520354	520354	520354	573175	—	—	—
Washer, fibre, rim screw . . . . .	—	—	—	—	—	—	—	—	162008	—	—	—
Washer, screw retaining . . . . .	—	—	—	—	—	—	—	—	572586	—	—	—
§Bulb holder . . . . .	571197	571197	571197	522546	525757	571197	571197	571197	573178	525757	—	525757
Screw, grub, terminal . . . . .	—	—	—	—	—	—	—	—	120560	—	—	—
§Interior . . . . .	—	—	—	—	—	—	—	—	—	—	571476	—
Screw or nut, bulb holder fixing . . . . .	—	—	—	—	113511	—	—	—	—	—	—	—
Shell . . . . .	—	—	—	—	—	—	—	—	—	—	571468	—
§Reflector . . . . .	525849	525849	525849	—	—	525849	525849	525849	—	—	—	—
§Spring, adaptor fixing . . . . .	524637	524637	524637	—	—	524637	524637	524637	—	—	524637	—
§Grommet, cable entry . . . . .	—	—	—	—	—	—	—	—	573179	—	—	—
Gasket, seating body . . . . .	—	—	—	—	—	—	—	—	573173	—	—	—
§Bulb . . . . .	200	207	207	207	207	207	207	207	—	207	219	207
Body or bracket, bulb holder . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Body, rubber . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, lamp fixing . . . . .	181261	181261	181261	177074	181261	181261	181261	181261	—	181261	—	181261
Washer, lamp seating or base . . . . .	—	—	—	‡175041	—	—	—	—	—	—	—	—
Screw, lamp fixing . . . . .	—	—	—	185061	—	—	—	—	—	—	—	—
Washer, distance . . . . .	522166	—	—	—	—	—	—	—	—	—	—	—
Washer, shakeproof . . . . .	188350	188350	188350	185053	188350	188350	188350	188350	—	188350	—	188350
Base, lamp seating . . . . .	—	—	—	—	—	522003	—	522003	—	—	—	—
Foot, lamp seating . . . . .	520352	523448	520332	—	523044	—	520332	—	—	523044	—	523044
Bolt, lamp fixing . . . . .	522964	522964	522964	—	—	520395	522964	520395	—	522964	—	522964
§Grommet, rubber . . . . .	—	—	—	—	572363	—	—	—	—	—	—	—
§Ring, rubber . . . . .	—	—	—	—	—	—	—	—	—	—	572260	—
§Sleeve, terminal . . . . .	—	—	—	—	—	—	—	—	—	—	188818	—
Medallion or indicator tell-tale . . . . .	524874	524874	524874	—	524874	524874	524874	524874	—	—	—	—
Clip, medallion fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Bracket, clamp . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Screw, stirrup fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Terminal, earthing . . . . .	524733	524733	524733	—	—	524733	524733	524733	—	—	—	—

Note. For replacement lamp spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Base stud fixing § Recommended spares for stock  
C.P.R. . . Chromium plated rim

For illustrations, see pages J7-J9

continued

DETAILED SPARE PARTS

Part No. . . . .	†52091A	†52092A	†52097A	52098A	†52099A/B	52102A	†52105A	A52105A	52108A	†52110A/B	†52112A	†52113A
Model . . . . .	LBD109A	1142	RC330-3	S463	1142	FLSO	LD109A	LD109A	LD109A/F	LD109A	S463	1142
Finish . . . . .	Chromium	Chromium	Black, C.P.R.	Chromium	Chromium	Black	Black, C.P.R.	Black, C.P.R.	Black, C.P.R.	Black, C.P.R.	Chromium	Chromium
Replaced by (see footnote) . . . . .	(A52157)	(52164)	(52189)	(52525)	(52164)	—	(52154)	(52523)	—	(52154)	(52525)	(52121)
§Rim or door . . . . .	521989	523024	‡524539	571897	523024	571212	521989	521989	521989	521989	571897	523024
Screw, rim or lens fixing . . . . .	523429	—	—	524552	—	571203	523429	523429	523429	523429	524552	—
§Washer or ring, retaining . . . . .	—	—	—	—	—	524215	—	—	—	—	—	—
§Springs, set, lens fixing . . . . .	522869	523000	—	522869	523000	522869	522869	522869	522869	522869	522869	523000
Bracket or plate, rim fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Lens or glass . . . . .	571211	523034	525826	571894	523034	571211	571211	571211	571211	571211	571894	523034
§Lens plate or cover . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Gasket, lens seating . . . . .	520354	522966	—	571895	522966	520354	520354	520354	520354	520354	571895	522966
Ring, sliding . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Bulb holder . . . . .	571197	525757	—	—	525757	525850	571197	571197	571197	571197	—	525757
§Interior . . . . .	—	—	—	—	552103	552101	—	—	—	—	552103	—
Screw or nut, bulb holder fixing . . . . .	—	113511	—	—	113511	—	—	—	—	—	—	113511
Shell . . . . .	—	—	—	571468	—	—	—	—	—	—	571468	—
§Reflector . . . . .	525849	—	524544	571891	—	525849	525849	525849	525849	525849	571891	—
§Spring, adaptor fixing . . . . .	524637	—	—	524637	—	524637	524637	524637	524637	524637	524637	—
Backplate . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Gasket, backplate body seating . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Nut, backplate fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Bulb . . . . .	200	207	209	207	207	209	207	200	207	207	207	207
Body or bracket, bulb holder . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Body, rubber . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, lamp fixing . . . . .	181261	181261	183919	183919	181261	—	181261	181261	—	181261	183919	181261
Washer, lamp seating or base . . . . .	146240	—	—	571899	—	—	146240	146240	—	146240	—	—
Screw, lamp fixing . . . . .	—	—	—	525859	—	—	—	—	—	—	525859	—
Washer, distance . . . . .	—	—	—	571898	522166	—	—	—	—	522166	—	—
Washer, shakeproof . . . . .	188350	188350	188349	188349	188350	—	188350	188350	—	188350	188349	188350
Base, lamp seating . . . . .	522003	—	525839	571886	—	—	522003	522003	—	—	571900	—
Foot, lamp seating . . . . .	—	522959	—	—	523044	—	—	—	—	520352	—	—
Bolt, lamp fixing . . . . .	522964	522964	525853	—	522964	—	522964	522964	—	520395	—	522964
§Grommet, rubber . . . . .	—	572363	—	—	572363	525829	—	—	525829	—	—	—
§Ring, rubber . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Sleeve, terminal . . . . .	555910	—	—	188818	—	—	—	—	—	—	188818	—
Medallion or indicator tell-tale . . . . .	524874	524874	—	571887	524874	—	524874	524874	—	524874	571887	524874
Clip, medallion fixing . . . . .	—	—	—	571888	—	—	—	—	—	—	571888	—
Bracket, clamp . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Screw, stirrup fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Terminal, earthing . . . . .	524733	—	—	—	—	—	524733	524733	—	524733	—	—

(including lamps with flasher indicating double filament bulbs)

SIDE LAMPS

52091 — 52113

Note. For replacement lamp spare parts, see appropriate column under part number    † When ordering, quote part number shown in brackets    ‡ With lens    § Recommended spares for stock  
C.P.R. . . Chromium plated rim

DETAILED SPARE PARTS

J14

52117 — 52143

Part No. . . . .	†52117A	†52118A	52120B/E	52121A	†52130A	†52133A	52134A/B	52137A/B	†52138A	52139A/F	†52142D/E	†52143E/H
Model . . . . .	RC330	470	461-1	1142	470-1	451	1130	1185	1185	489-1	488	488
Finish . . . . .	Black	Black, C.P.R.	C.P.R.	Black, C.P.R.	C.P.R.	C.P.R.	Chromium	C.P.R.	C.P.R.	C.P.R.	C.P.R.	C.P.R.
Replaced by (see footnote) . . . . .	(52188)	(52151)	—	—	(52165)	(52047)	—	—	(52167)	—	(52232)	(52160)
§Rim or door . . . . .	524539	572156	‡571759	523024	572156	571465	—	523896	523896	‡572776	572734	572734
§Screw, rim or lens fixing . . . . .	—	573676	113581	—	572072	—	118261	—	—	—	—	—
Washer or ring, retaining . . . . .	—	161385	—	—	161385	—	—	—	—	—	—	—
§Springs, set, lens fixing . . . . .	—	—	—	523000	—	—	—	—	—	—	—	—
Bracket or plate, rim fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Lens or glass . . . . .	525826	572155	—	523034	572155	—	571584	—	—	572772	572715	572715
§Lens plate or cover . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Gasket, lens seating . . . . .	—	572174	—	522966	572174	—	—	—	—	572775	—	—
Ring, sliding . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Bulb holder . . . . .	—	572162	—	525757	—	—	571576	—	—	572783	573251	573255
§Interior . . . . .	—	553780	552103	—	552101	552103	552101	552103	531961	553780	552101	553780
Screw or nut, bulb holder fixing . . . . .	—	126444	—	113511	—	—	—	—	—	—	—	—
Shell . . . . .	—	—	571739	—	—	571468	—	—	—	—	—	—
§Reflector . . . . .	524544	—	—	—	—	—	—	—	—	—	—	—
§Spring, adaptor fixing . . . . .	—	—	571738	—	—	524637	—	—	—	—	—	—
Backplate . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Gasket, backplate body seating . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Nut, backplate fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Bulb . . . . .	200	222	207	207	381	207	381	207	381	222	381	222
Body or bracket, bulb holder . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
§Body, rubber . . . . .	—	—	—	—	—	—	—	—	—	572763	575003	575003
§Nut, lamp fixing . . . . .	183919	170574	—	181261	—	—	—	—	—	—	—	—
Washer, lamp seating or base . . . . .	—	—	—	—	—	572264	—	—	—	—	—	—
Screw, lamp fixing . . . . .	—	—	—	—	—	571475	142725	—	—	—	—	—
Washer, distance or packing . . . . .	—	188330	571758	—	—	—	—	—	—	—	—	—
Washer, shakeproof . . . . .	188349	185081	—	188350	—	—	—	—	—	—	—	—
Base, lamp seating . . . . .	—	—	—	—	—	—	571560	—	—	—	—	—
Foot, lamp seating . . . . .	—	—	—	522959	—	—	—	—	—	—	—	—
Bolt, lamp fixing . . . . .	—	—	—	522964	—	—	—	—	—	—	—	—
§Grommet, rubber . . . . .	—	572039	—	—	—	572265	—	—	—	—	—	—
§Ring, rubber . . . . .	—	—	—	—	—	572260	574376	523986	523986	—	—	—
§Sleeve, terminal . . . . .	—	188818	188818	—	188818	188818	188818	—	—	555910	555910	555910
Medallion or indicator tell-tale . . . . .	—	—	—	524874	—	—	—	‡‡571887	‡‡551887	—	—	—
Clip, medallion fixing . . . . .	—	—	—	—	—	—	—	‡‡571888	‡‡551888	—	—	—
Bracket, clamp . . . . .	—	572158	—	—	—	—	—	—	—	—	—	—
Screw, stirrup fixing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—
Terminal, earthing . . . . .	—	—	—	—	—	—	—	—	—	—	—	—

(including lamps with flasher indicating double filament bulbs)

SIDE LAMPS

Note. For replacement lamp spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock ‡ With lens  
 † Supplied separately C.P.R. . . Chromium plated rim

For illustrations, see pages J7-J9

continued