


**SERVICE PARTS LIST**

**THE M.G. Series MGA 1500**

Item No.	DESCRIPTION	Commencing (E) GB101		Qty. per Vehicle		Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD		New Part Number	Change-Point	Amdt. No.	
	<b>CLUTCH</b>									
	<b>CLUTCH COMPONENTS</b>									
1	Clutch assembly	N.S.P.								
2	Cover assembly	7H3211	E1	1	1		27H3159	Com. (E) GB16226		
3	Lever release	7H3196	E2	3	3	12				
4	Retainer for release lever	7H3001	E3	3	3	72				
5	Pin for release lever	7H3067	E4	3	3	12				
6	Spring—anti-rattle	7H3171	E5	3	3	36				
7	Strut for release lever	7H3069	E6	3	3					
8	Eyebolt and nut	27H3157	E7	3	3					
9	Plate—release lever	7H3213	E8	1	1	12				
10	Plate—pressure	7H3085	E9	1	1					
11	Spring for pressure plate	3H2914	E10	6	6		1H1024	Com. (E) GB16225		
12	Plate—driven assembly	(R) 7H3215	E11	1	1					
13	Lining and rivets	8G8348		1 set	1 set	1				
14	Rivet	7H3078		22	22					
15	Bearing assembly—release	7H3214	E12	1	1					
16	Ring—carbon	7H3277	E13	1	1					
17	Retainer for bearing	7H3048	E14	2	2	36				
18	Screw for clutch to flywheel	HZS0507	E15	6	6					
19	Washer for screw (spring)	2K5319	E16	6	6					

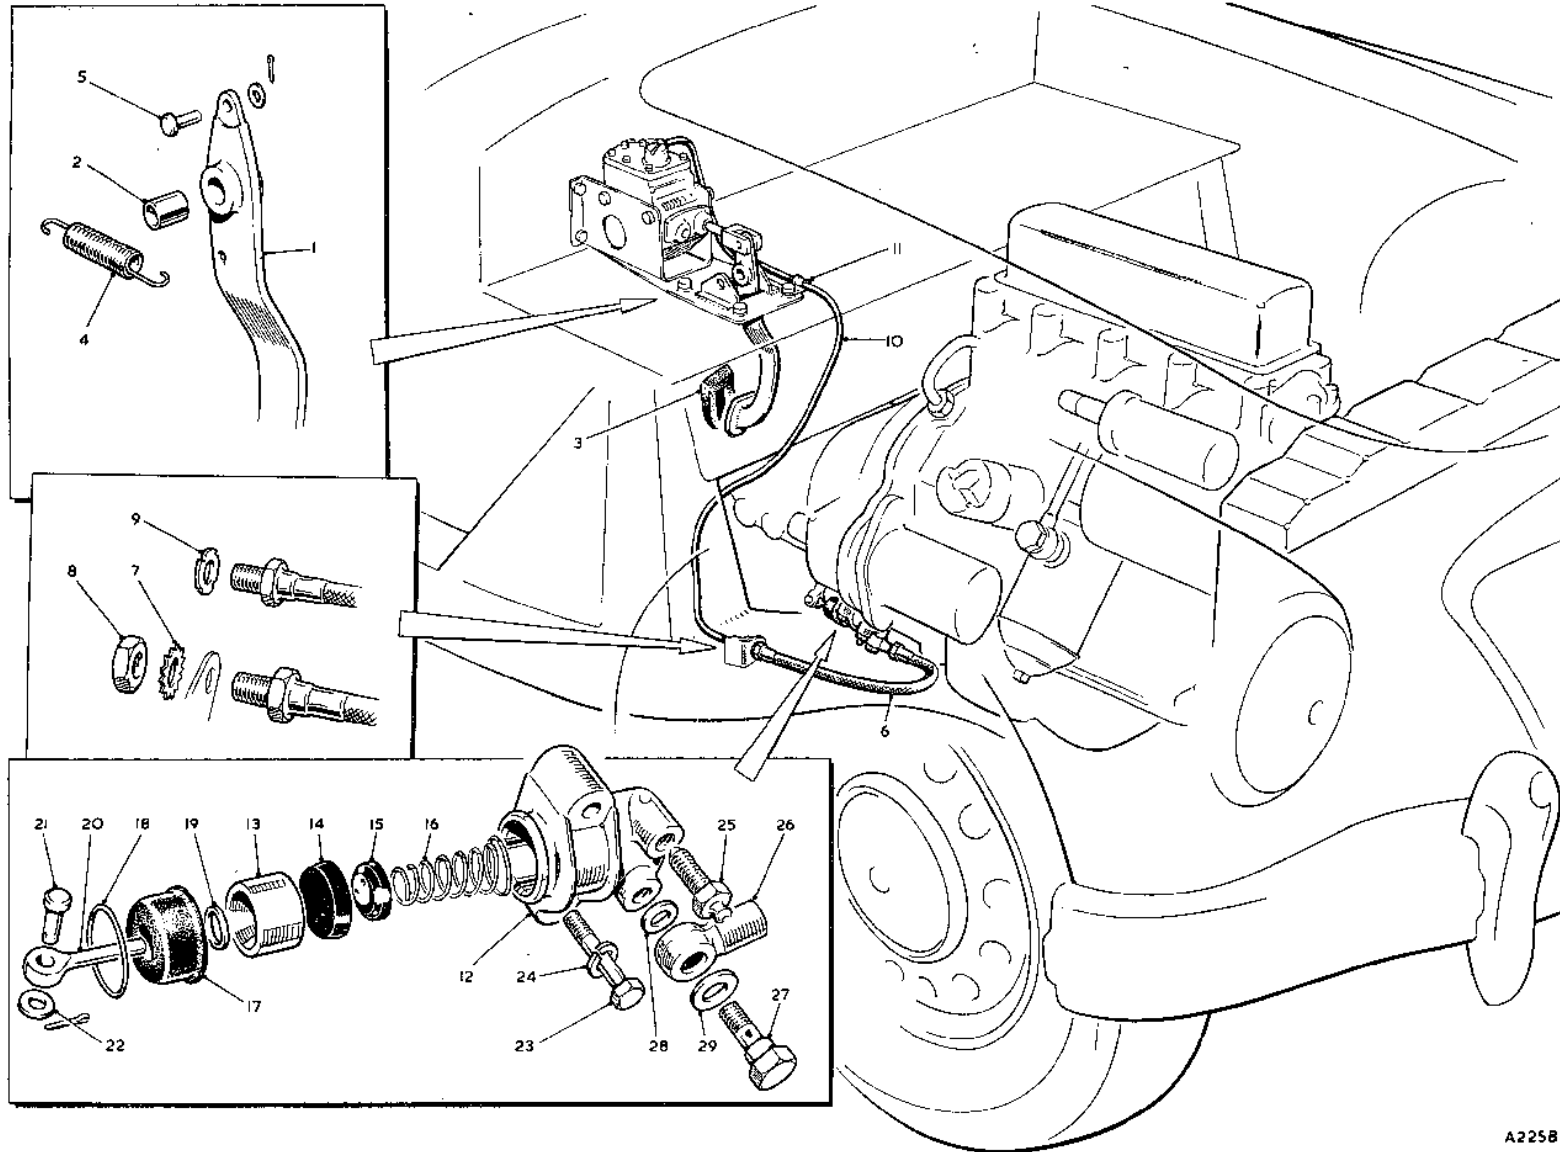

A2258

**SERVICE PARTS LIST**

**THE M.G. Series MGA 1500**

Item No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	<b>CLUTCH PEDAL AND LINKAGE</b>										
1	Pedal—clutch	AHH5091	EA1	1				AHH5841	Com. (C) 61100		
2	Pedal—clutch	AHH5117			1			AHH5842	Com. (C) 58713		
3	Bush	185794	EA2	1	1						
4	Pad for pedal (rubber)	AHH5100	EA3	1	1						
5	Spring—pull-off—pedals	130154	EA4	2	2	6					
6	Clevis pin for clutch and brake pedals	CLZ0512	EA5	2	2						
7	Hose for clutch	7H7857	EA6	1	1						
8	Washer for hose	LWN710	EA7	1	1						
9	Locknut for hose	2K8886	EA8	1	1						
10	Joint for clutch hose	3H550	EA9	1	1						
11	Pipe for master cylinder to clutch hose	AJD276	EA10	1							
12	Pipe for master cylinder to clutch hose	AJD118			1						
13	Clip for clutch pipe	PCR0411	EA11	1	1						
14	Clip for clutch pipe to bulkhead	CHR0409			2						
	<b>CLUTCH OPERATING CYLINDER</b>										
15	Cylinder assembly	ACH5457		1	1			7H7974	] Com. (C) 11768		
16	Body	7H7955	EA12	1	1			7H7983			
17	Piston	7H7003	EA13	1	1						
18	Cup for piston	7H7004	EA14	1	1						
19	Filler for piston cup	7H7560	EA15	1	1						
20	Spring for cup filler	7H7959	EA16	1	1						
21	Boot	7H7957	EA17	1	1						
22	Clip for boot (large)	7H7956	EA18	1	1						
23	Clip for boot (small)	7H7958	EA19	1	1						
24	Push-rod	7H7954	EA20	1	1						
25	Clevis pin—slave cylinder to clutch fork	CLZ0517	EA21	1	1						
26	Washer for clevis pin (plain)	PWZ105	EA22	1	1						
27	Bolt for slave cylinder to gearbox	HBZ0615	EA23	2	2			ACH8483	Com. (C) 21513		
28	Washer for bolt (spring)	LWZ206	EA24	2	2						
29	Bleeder screw	8H554	EA25	1	1						
30	Banjo for slave cylinder	3H544	EA26	1	1						
31	Bolt for banjo to slave cylinder	3H547	EA27	1	1				] Fin. (C) 11767		
32	Joint for banjo	7H7456	EA28	1	1						
33	Joint for banjo	3H550	EA29	1	1						